


# Air Comm Systems, Inc.

## Single Audio Mixer Panel Operations and Installation Manual

ACS 2010-300

Revision 1.0

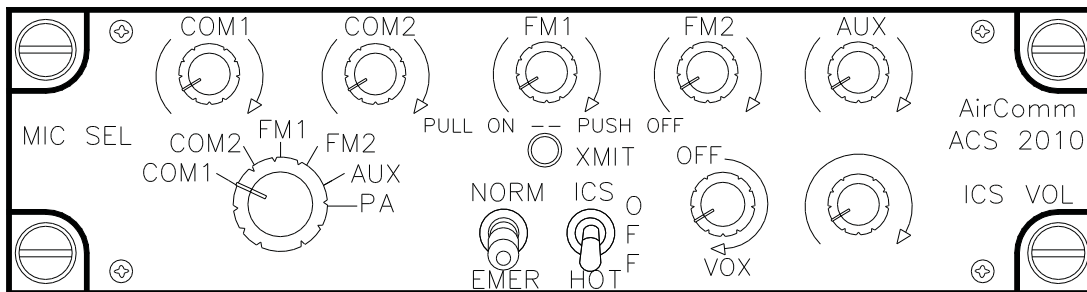

# AirComm

Airborne Audio Products

**Air Comm Systems Inc.**  
1640 W. Acoma Blvd., Suite A-118  
Lake Havasu City, AZ 86403  
Phone (928) 854-5402  
FAX (928) 854-8919  
E-Mail [aircomminc@aol.com](mailto:aircomminc@aol.com)

# ACS 2010-300 Operations and Installation Manual

## Table of Contents

### ■ Installation

Physical and Operating Specifications	Page 3
Physical Dimensions	Page 4
Interface Schematic	Page 5

### ■ Operation

Front Panel Controls	Page 6-7
Front Panel Controls Pictorial	Page 8

### ■ Addendum

Instruction for Continued Airworthiness	Page 9
--------------------------------------------	--------

### ■ Warranty Information

Warranty Information	Page 10
----------------------	---------

### ■ Supplemental Information

Product Schematics	_____
--------------------	-------

# ACS 2010-300 Operations and Installation Manual

## Physical and Operating Specifications

### ■ Physical Specifications

*SIZE:* 5.75 in. (14.61cm) W  
1.50 in. (3.81 cm) H  
5.03 in. (12.77cm) D

*WEIGHT:* 1.25 lb. (.56kg)

*MOUNTING:* Dzus rail mount

*CONTROLS:* Panel mounted - transmit = rotary switch, audio inputs = potentiometer,  
volume control = dual potentiometer

*ILLUMINATION:* Edge lit front panel per MIL-P-7738E, type 3. Capable of connection to  
dimmer bus for adjustment. Amber transmit light indicates when unit is in  
transmit mode.

### ■ Operating Specifications

*INPUTS:* 5 selectable receive audio inputs and 6 transmit selections.

*DUTY CYCLE:* Continuous

*POWER REQUIREMENTS:* 28V DC +/- 10%

*MAXIMUM OPERATING ALTITUDE:* 22,000 ft.

*OPERATING TEMPERATURE RANGE:* -40 C to +85 C (operating)  
-65 C to +125 C (storage)

*CURRENT DRAIN:* 70 mA at 28V (standby) - 500mA at 28V (max. signal)

*AUDIO OUTPUT:* Minimum 250 mW into 600 ohms

*FREQUENCY RESPONSE:* Within 6 db - 300-3000Hz

*ICS INPUT IMPEDANCE:* 600 ohms

*RECEIVER INPUT IMPEDANCE:* 600 ohms - matched to receiver

*INPUT ISOLATION:* Not less than 50 db between inputs

*AUDIO MUTING:* Not less than 40 db during transmit/ICS (optional)

*MIKE SENSITIVITY:* 300 mV for rated output


*DISTORTION:* Less than 10% at 1000 Hz for maximum output

## ACS 2010-300 Operations and Installation Manual


### Physical Dimensions

#### ■ Physical Dimension Outline for mounting

UNIT WIDTH BEHIND FACE PLATE

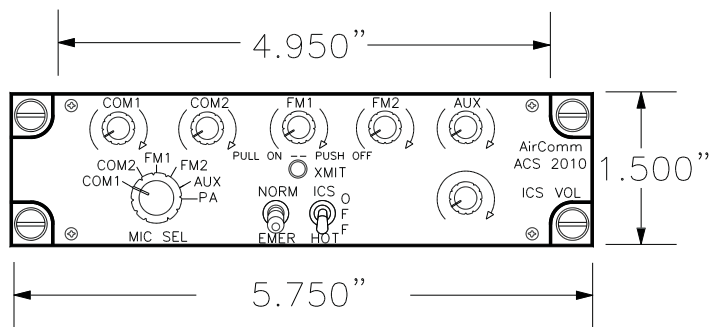

FRONT PANEL WIDTH – STANDARD DZUS MOUNT

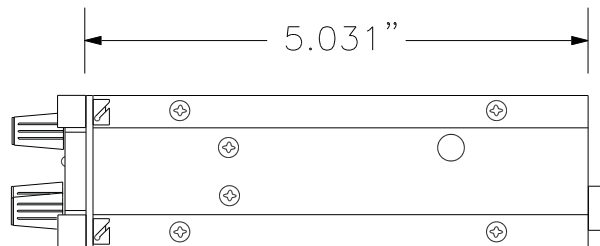

ALLOW UP TO 2.500" FOR REAR  
CONNECTOR AND CABLE CLEARANCE

#### **Physical Installation**


The ACS 2010-300 is designed to be Dzus mounted and should be installed in the aircraft using the DC37SL-F Installation kit that is included. The above outline drawing of the unit with dimensions will facilitate the installation.

The connector pin configuration of the ACS 2010-300 rear connector and the recommended wire size for the aircraft cable harness is shown on the following page. Be sure that adequate clearance is allowed for the rear connector and cable harness.

# ACS 2010-300 Operations and Installation Manual

## Interface Schematic

### ■ Connector Pin-out

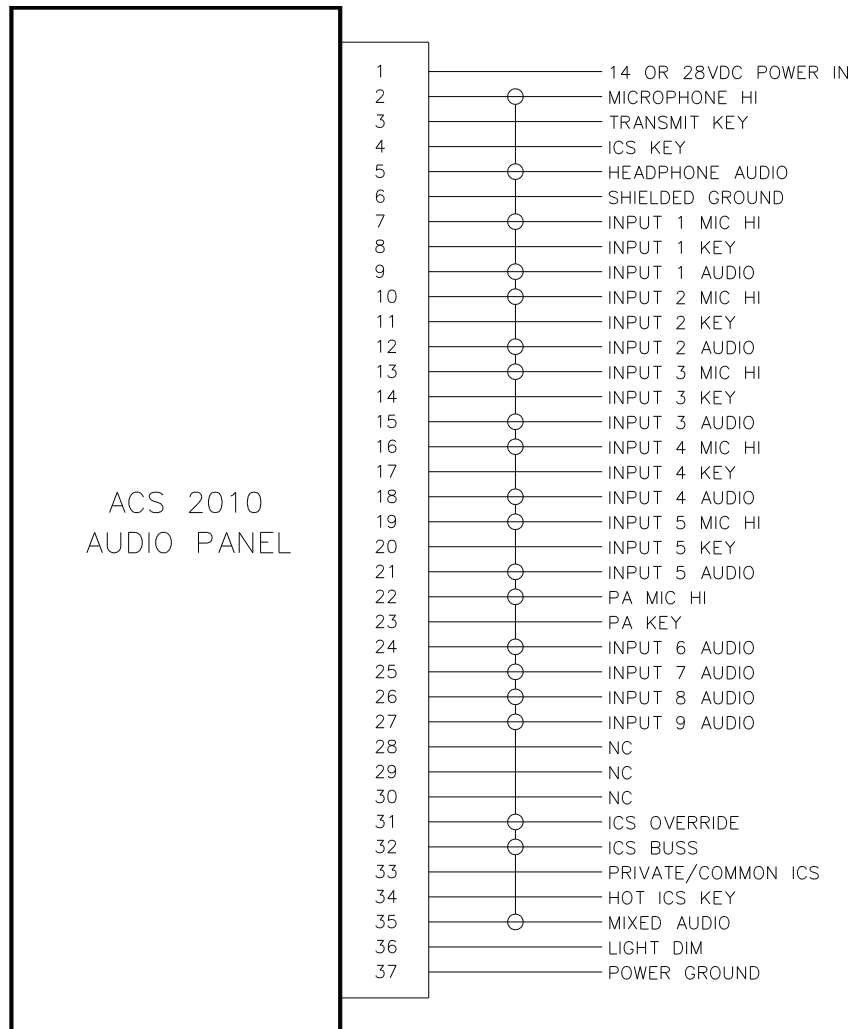

The ACS 2010-300 wiring harness should be constructed of Tefzel aircraft wire (M22759/16 grade). Power and ground wires should be 18 or 20 AWG, and all other wires may be 22 AWG. Shielded wires should be used where noted. Adequate protection against wear and chafing should be taken by using a braided cable sleeving or jacket. Before completing installation, verify that all cable connector pins are seated properly and that the connector is securely mounted to the unit mating connector.

Pre-fabricated cable harnesses are available from Air Comm to expedite installation — consult our sales department for details.

## **ACS 2010-300 Operations and Installation Manual Front Panel Controls**

*( See Figure 1 — Page 8 for pictorial )*

### **■ 1 - Norm - Emer Switch**

This switch controls the operations of the audio panel in the event of an audio amplifier failure. In the “up” position (NORM) the audio panel is in normal operating mode. In the “down” position (EMER) all audios are summed and then fed directly to the headphones. This enables the use of the transmitters and other equipment during audio amplifier failure.

### **■ 2 - QUICK ADJUST Adjustable Receive Audio Volume - On/Off Pots**

Any Receive audio can be selected and muted using innovative new QUICK ADJUST volume pots. A receive audio is selected by pulling out the knob toward the operator. With the receive audio activated, the headphone volume of the audio can then be adjusted to the desired level. Turning the knob in a clockwise direction increases the volume level, and turning in the counter-clockwise direction decreases the volume level. To mute the receive audio, the knob only needs to be pushed back in. The volume for that audio remains set at the desired level and does not need to be reset the next time it is selected.

### **■ 3 - ICS Volume Control**

This knob adjusts ICS headphone volume. Clockwise rotation increases the volume - counter clockwise rotation decreases the volume.

### **■ 4 - Lighting**

The audio panel is lit by two 28V lamps ( P/N 327 ) which provide night time visibility for all panel legends. These lamps can be replaced in the event of a failure by unscrewing the front panel mounted filter cap, inserting a new lamp, and reinserting the filter into the front panel.

# ACS 2010-300 Operations and Installation Manual

## Front Panel Controls

( See Figure 1 — Page 8 for pictorial )

### ■ 5 - Mic Selector

This rotary switch performs three functions simultaneously. It (a) connects the mic to the selected transmitter (b) selects the associated keyline, and (c) selects the associated audio (if not already selected using the audio select-mute volume pot).

### ■ 6 - Transmit Indicator

When the transmit key is activated this indicator lights up to show that the audio panel is in the transmit mode.

### ■ 7 - ICS Switch

This switch selects the ICS mode. In the “up” position the audio panel is connected to the common ICS buss. This enables the audio panel to communicate with any other audio panels also connected to the common ICS buss. In the “center” position ( OFF ) the audio panel is disconnected from all other panels.

In the “down” position ( HOT ICS ) the headphone mic becomes active and its signal is fed into the ICS buss without having to depress the ICS key switch. This provides for “ hands-off ” ICS operation.

### ■ 8- VOX Control

The high-power VOX is controlled by this knob. In order to use the VOX feature, the ICS ON/OFF/HOT toggle switch must either be in the “ON” or “HOT” position. If the toggle switch is in the “OFF” position, the Audio Mixer Panel is isolated from the ICS buss, and no ICS communication is possible. Once the ICS switch is in the “ON” or “HOT” position, the VOX can be activated by turning the knob clockwise past the On/Off detent .


The moment you begin talking the VOX circuitry activates and relays your voice transmission. When you stop speaking the VOX circuit turns off to reduce unwanted background noise. Turning the knob clockwise adjusts the squelch control. If the knob is turned fully clockwise the VOX circuit will always be active and you will hear background noise. If the knob is adjusted just past the On/Off detent then the VOX circuit cannot be activated and you will revert to normal keyed ICS. Adjust the squelch level to match the ambient noise conditions of the aircraft at the time for proper operation.

While in the VOX mode, if you wish to quickly isolate yourself from the ICS buss, you simply put the ICS ON/OFF/HOT toggle switch in the “OFF” position.

# ACS 2010-300 Operations and Installation Manual

## Front Panel Controls

■ Figure 1 - Front Panel Controls

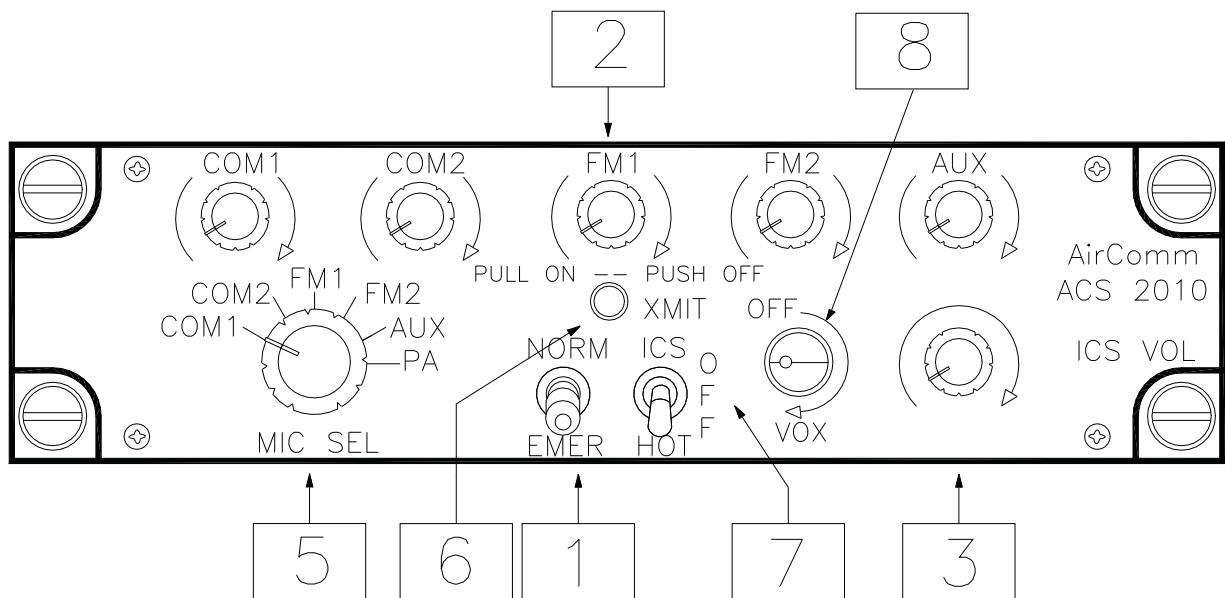



**ACS 2010-300 Operations and Installation Manual  
Addendum  
Instruction for Continued Airworthiness**

Instruction for continued airworthiness for Audio Mixer Panel Model ACS-2010 Series, Part Number 1004-000.

**GENERAL DESCRIPTION:**

The Audio Mixer Panel consists of a Dzus mounting located in the cockpit or cabin area which provides access to multiple radios for transmitting and receiving. It also provides intercom, both keyed and VOX between other audio mixer panels or slave units located elsewhere in the aircraft.

**PURPOSE:**

To provide instructions for the maintenance and inspection of the Air Comm Systems, Inc. Model ACS-2010 Series Audio Mixer Panels.

This Manual provides instructions supplementing the aircraft maintenance manual. These instructions only supersede the aircraft manual in the indicated areas.

**OPERATIONAL CHECK:**

The Audio Mixer Panel should be checked prior to first flight each day per current operations manual.

**MAINTENANCE:**

Check security and condition of Dzus mounted panel(s), check associated wiring harness at periodic inspections such as annual/100 hour IAW FAR43 Appendix D(i).

**On Condition.**

Send Audio Mixer Panel(s) to qualified repair facility for any repairs. Contact Air Comm Systems, Inc. Phone 909-0824-8860 or FAX 909-824-8862 for nearest factory authorized repair facility.

## ACS 2010-300 Operations and Installation Manual Warranty Information

### ■ Warranty Information

Air Comm Systems, Inc. warrants each new product to be free from defective material and workmanship and agrees to remedy any defect or to furnish a new part in exchange for any defective unit provided an examination discloses such defect occurred under normal use and service, and provided the defective unit is delivered to us, with transportation charges prepaid, within 1 year from the date of acceptance of equipment by the owner. Each unit required and claimed defective must be returned to:

Air Comm Systems, Inc.  
1640 W. Acoma Blvd., Suite A-118  
Lake Havasu City, AZ 86403  
Attn: Service Dept.

Phone (928) 854-5402  
FAX (928) 854-8919  
EMail [aircomminc@aol.com](mailto:aircomminc@aol.com)

This warranty does not extend to any products which have been subjected to misuse, neglect, accident, or in violation of instructions furnished, nor does it extend to units which have been repaired or altered outside of our factory except where such repairs are specifically authorized in writing by us.

This warranty is in lieu of all other warranties expressed or implied, and no representative or person is authorized to assume for us any other liability in connection with the sale of our products.